

YAMAHA社 MTX対応コントローラー取扱説明書


本マニュアルは、MTX3/MTX5-Dをコントロールするためのマニュアルです。

IPアドレスについて(必ずお読みください)


本機のIPアドレスは192.168.0.168に設定されており、DHCP非対応です。
初期設定でIPアドレス192.168.0.1に設定したデバイスをコントロールすることができます。
本機のIPアドレスは、WEBブラウザに本機のIPアドレスを入力してWEB UIにアクセスし、ネットワーク設定ページより変更できます。

デバイスのIPアドレスを変更する場合 (ProVisionaire Design使用例)

①「System」―「IP Settings」を選択します。

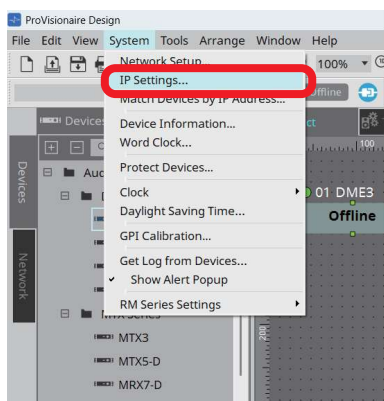


②表示された一覧からIPアドレスを変更したい機種を選択し、「Set IP Address」を選択します。

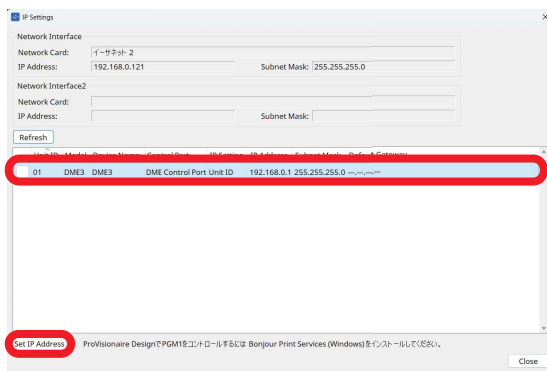

③「IP Setting」で「Static IP」を選択し、任意のIPアドレスを設定します。

その際、他の機器とIPアドレスが重複しないよう気を付けてください。IPアドレスを入力したら、「OK」を選択します。

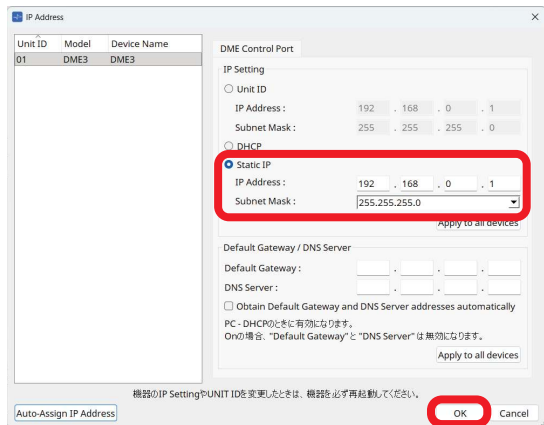

本機のIPアドレスを変更する場合や、コントロール先のデバイスのIPアドレスを変更した場合は、「WebUI設定画面 取扱説明書」を参照して、必ずネットワークの設定を行ってください。

DIPスイッチの設定について



チャンネルアサイン設定やその他の機能を切り替えます。

全機種共通の機能

- ・1,2,3番 : PresetのNoを選択します。
- ・4番 : 使用しません。
- ・5番 : シーンリコール時の動作を選択します。
ONにすると、接続先のデバイスでシーンリコールが行われた際に、ボリュームの値を再送信します。
これによりシーンリコール後も、本機のフェーダーの状態と接続先デバイスの音量にズレが生じることはありません。
- ・6番 : 1～3番で選択したPresetについて、工場出荷時の設定値を使用するか、WebUIの設定でユーザーが書き換えた設定を使用するかを切り替えます。
ON:フリーアサイン(ユーザーが書き換えた設定を適用)
OFF:固定アサイン(工場出荷時の設定値を適用)

※1台のデバイスに対して本機を複数台接続する場合は、各本機のDIPスイッチ設定でアサインするチャンネルが重複しないようにしてください。

DIPスイッチ Preset一覧

ご使用になりたいチャンネルアサインにあわせて、DIPスイッチの設定を変更してください。

4chモデル

PRESET番号	PRESET 1	PRESET 2	PRESET 3	PRESET 4	PRESET 5	PRESET 6	PRESET 7	PRESET 8
DIP設定								
1ch	IN 1	IN DCA 1	IN DCA 1	OUT DCA 1	N/A	N/A	N/A	N/A
2ch	IN 2	IN DCA 2	IN DCA 2	OUT DCA 2	N/A	N/A	N/A	N/A
3ch	IN 3	IN DCA 3	OUT DCA 1	OUT DCA 3	N/A	N/A	N/A	N/A
4ch	IN 4	IN DCA 4	OUT DCA 2	OUT DCA 4	N/A	N/A	N/A	N/A

8chモデル

PRESET番号	PRESET 1	PRESET 2	PRESET 3	PRESET 4	PRESET 5	PRESET 6	PRESET 7	PRESET 8
DIP設定								
1ch	IN 1	IN 1	IN 1	IN 1	IN 1	IN DCA 1	IN DCA 1	OUT DCA 1
2ch	IN 2	IN 2	IN 2	IN 2	IN 2	IN DCA 2	IN DCA 2	OUT DCA 2
3ch	IN 3	IN 3	IN 3	IN 3	IN 3	IN DCA 3	IN DCA 3	OUT DCA 3
4ch	IN 4	IN 4	IN 4	IN 4	IN 4	IN DCA 4	IN DCA 4	OUT DCA 4
5ch	IN 5	IN 5	IN 5	IN 5	IN 5	IN DCA 5	OUT DCA 1	OUT DCA 5
6ch	IN 6	IN 6	IN 6	IN 6	Fx RTN 1	IN DCA 6	OUT DCA 2	OUT DCA 6
7ch	IN 7	IN ST 1	IN ST 1	Fx RTN 1	OUT DCA 1	IN DCA 7	OUT DCA 3	OUT DCA 7
8ch	IN 8	ZONE OUT 1	OUT DCA 1	OUT DCA 1	OUT DCA 2	IN DCA 8	OUT DCA 4	OUT DCA 8

12chモデル

PRESET番号	PRESET 1	PRESET 2	PRESET 3	PRESET 4	PRESET 5	PRESET 6	PRESET 7	PRESET 8
DIP設定								
1ch	IN 1	IN DCA 1	IN DCA 1	IN DCA 1	N/A	N/A	N/A	N/A
2ch	IN 2	IN DCA 2	IN DCA 2	IN DCA 2	N/A	N/A	N/A	N/A
3ch	IN 3	IN DCA 3	IN DCA 3	IN DCA 3	N/A	N/A	N/A	N/A
4ch	IN 4	IN DCA 4	IN DCA 4	IN DCA 4	N/A	N/A	N/A	N/A
5ch	IN 5	IN DCA 5	IN DCA 5	OUT DCA 1	N/A	N/A	N/A	N/A
6ch	IN 6	IN DCA 6	IN DCA 6	OUT DCA 2	N/A	N/A	N/A	N/A
7ch	IN 7	IN DCA 7	OUT DCA 1	OUT DCA 3	N/A	N/A	N/A	N/A
8ch	IN 8	IN DCA 8	OUT DCA 2	OUT DCA 4	N/A	N/A	N/A	N/A
9ch	IN 9	OUT DCA 1	OUT DCA 3	OUT DCA 5	N/A	N/A	N/A	N/A
10ch	IN 10	OUT DCA 2	OUT DCA 4	OUT DCA 6	N/A	N/A	N/A	N/A
11ch	IN 11	OUT DCA 3	OUT DCA 5	OUT DCA 7	N/A	N/A	N/A	N/A
12ch	IN 12	OUT DCA 4	OUT DCA 6	OUT DCA 8	N/A	N/A	N/A	N/A

16chモデル

PRESET番号	PRESET 1	PRESET 2	PRESET 3	PRESET 4	PRESET 5	PRESET 6	PRESET 7	PRESET 8
DIP設定								
1ch	IN 1	IN 1	IN 1	IN 1	IN 1	IN 1	IN 1	IN DCA 1
2ch	IN 2	IN 2	IN 2	IN 2	IN 2	IN 2	IN 2	IN DCA 2
3ch	IN 3	IN 3	IN 3	IN 3	IN 3	IN 3	IN 3	IN DCA 3
4ch	IN 4	IN 4	IN 4	IN 4	IN 4	IN 4	IN 4	IN DCA 4
5ch	IN 5	IN 5	IN 5	IN 5	IN 5	IN 5	IN 5	IN DCA 5
6ch	IN 6	IN 6	IN 6	IN 6	IN 6	IN 6	IN 6	IN DCA 6
7ch	IN 7	IN 7	IN 7	IN 7	IN 7	IN 7	IN 7	IN DCA 7
8ch	IN 8	IN 8	IN 8	IN 8	IN 8	IN 8	IN 8	IN DCA 8
9ch	IN 9	IN ST 1	IN DCA 1	IN ST 1	Fx RTN 1	ZONE OUT 1	IN DCA 1	OUT DCA 1
10ch	IN 10	IN ST 2	IN DCA 2	IN ST 2	IN DCA 1	ZONE OUT 3	IN DCA 2	OUT DCA 2
11ch	IN 11	IN ST 3	IN DCA 3	IN ST 3	IN DCA 2	ZONE OUT 5	IN DCA 3	OUT DCA 3
12ch	IN 12	Fx RTN 1	IN DCA 4	Fx RTN 1	IN DCA 3	ZONE OUT 7	IN DCA 4	OUT DCA 4
13ch	IN 13	Fx RTN 2	IN DCA 5	Fx RTN 2	IN DCA 4	OUT DCA 1	OUT DCA 1	OUT DCA 5
14ch	IN 14	ZONE OUT 1	ZONE OUT 1	OUT DCA 1	ZONE OUT 1	OUT DCA 2	OUT DCA 2	OUT DCA 6
15ch	IN 15	ZONE OUT 3	ZONE OUT 3	OUT DCA 2	ZONE OUT 3	OUT DCA 3	OUT DCA 3	OUT DCA 7
16ch	IN 16	ZONE OUT 5	ZONE OUT 5	OUT DCA 3	ZONE OUT 5	OUT DCA 4	OUT DCA 4	OUT DCA 8

24chモデル

PRESET番号	PRESET 1	PRESET 2	PRESET 3	PRESET 4	PRESET 5	PRESET 6	PRESET 7	PRESET 8
DIP設定								
1ch	IN 1	IN 1	IN 1	IN 1	IN 1	IN 1	IN 1	IN 1
2ch	IN 2	IN 2	IN 2	IN 2	IN 2	IN 2	IN 2	IN 2
3ch	IN 3	IN 3	IN 3	IN 3	IN 3	IN 3	IN 3	IN 3
4ch	IN 4	IN 4	IN 4	IN 4	IN 4	IN 4	IN 4	IN 4
5ch	IN 5	IN 5	IN 5	IN 5	IN 5	IN 5	IN 5	IN 5
6ch	IN 6	IN 6	IN 6	IN 6	IN 6	IN 6	IN 6	IN 6
7ch	IN 7	IN 7	IN 7	IN 7	IN 7	IN 7	IN 7	IN 7
8ch	IN 8	IN 8	IN 8	IN 8	IN 8	IN 8	IN 8	IN 8
9ch	IN 9	IN 9	IN 9	IN 9	IN 9	IN ST 1	IN 9	IN DCA 1
10ch	IN 10	IN 10	IN 10	IN 10	IN 10	IN ST 2	IN 10	IN DCA 2
11ch	IN 11	IN 11	IN 11	IN ST 1	IN ST 1	Fx RTN 1	IN DCA 1	IN DCA 3
12ch	IN 12	IN 12	IN 12	IN ST 2	IN ST 2	Fx RTN 2	IN DCA 2	IN DCA 4
13ch	IN 13	IN 13	IN 13	Fx RTN 1	Fx RTN 1	ZONE OUT 1	IN DCA 3	IN DCA 5
14ch	IN 14	IN 14	IN 14	Fx RTN 2	Fx RTN 2	ZONE OUT 3	IN DCA 4	IN DCA 6
15ch	IN 15	IN 15	IN 15	IN DCA 1	IN DCA 1	ZONE OUT 5	IN DCA 5	IN DCA 7
16ch	IN 16	IN 16	IN 16	IN DCA 2	IN DCA 2	ZONE OUT 7	IN DCA 6	IN DCA 8
17ch	IN 17	IN ST 1	IN ST 1	IN DCA 3	OUT DCA 1	OUT DCA 1	IN DCA 7	OUT DCA 1
18ch	IN 18	IN ST 2	IN ST 2	IN DCA 4	OUT DCA 2	OUT DCA 2	IN DCA 8	OUT DCA 2
19ch	IN 19	IN ST 3	IN ST 3	IN DCA 5	OUT DCA 3	OUT DCA 3	ZONE OUT 1	OUT DCA 3
20ch	IN 20	Fx RTN 1	Fx RTN 1	IN DCA 6	OUT DCA 4	OUT DCA 4	ZONE OUT 3	OUT DCA 4
21ch	IN 21	Fx RTN 2	Fx RTN 2	OUT DCA 1	OUT DCA 5	OUT DCA 5	ZONE OUT 5	OUT DCA 5
22ch	IN 22	ZONE OUT 1	OUT DCA 1	OUT DCA 2	OUT DCA 6	OUT DCA 6	ZONE OUT 7	OUT DCA 6
23ch	IN 23	ZONE OUT 3	OUT DCA 2	OUT DCA 3	OUT DCA 7	OUT DCA 7	OUT DCA 1	OUT DCA 7
24ch	IN 24	ZONE OUT 5	OUT DCA 3	OUT DCA 4	OUT DCA 8	OUT DCA 8	OUT DCA 2	OUT DCA 8

Volumeの可動範囲 (Min/Max)の設定について

本機のWebUI設定画面では、操作子(フェーダー等)の可動範囲を「Min」「Max」という項目で設定できます。


フェーダーの場合、右図の赤丸で示した位置が本製品の「ノミナル位置(0dB)」にあたります。

可動範囲は、このノミナル位置を基準に計算されます。

例:Maxを+6にすると、ノミナル位置から上限までの範囲が0～+6dBになります。


例:Minを-30にすると、下限からノミナル位置までの範囲が-30～0dBになります。

このため、Maxには0より大きい値、Minには0より小さい値のみ設定できます。

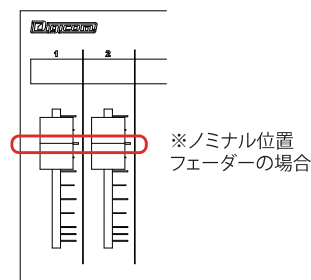


接続方法

■基本接続

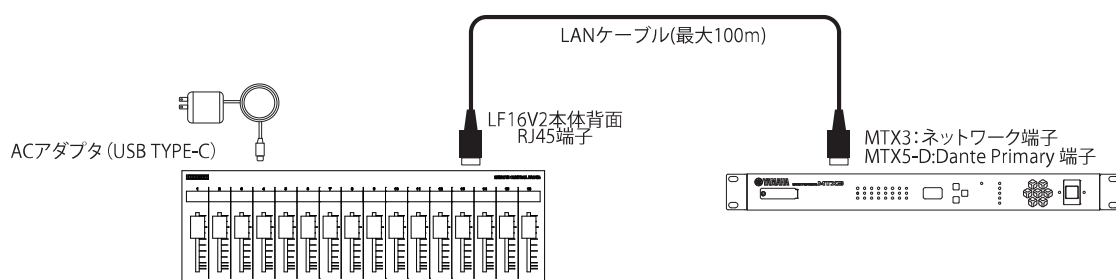

■PoE対応スイッチングハブを使用した基本接続

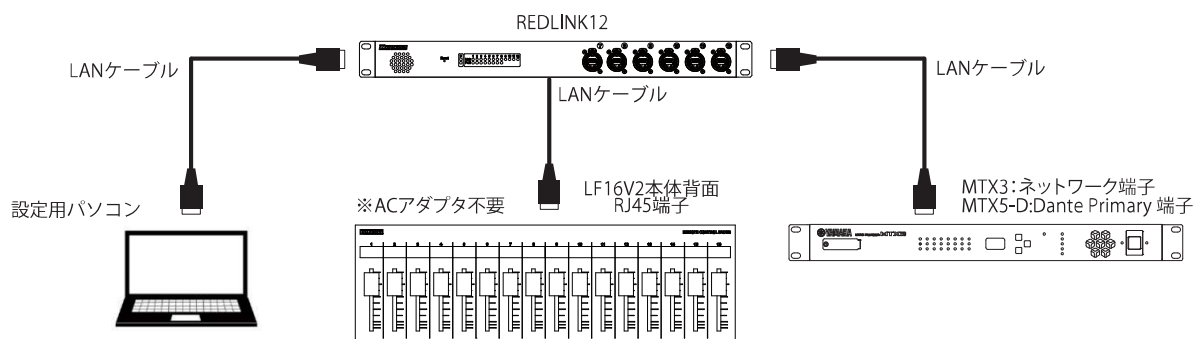

■商品に関する注意事項

持ち運びする際、移動時に強い衝撃を与えないで下さい。
水のかかる場所や直射日光が当たる場所での長時間の使用は避けて下さい。
海浜部、温泉地帯など金属のさびやすい場所では本体や取付金具の耐久性が低下する場合がありますのでご注意下さい。
ラックマウントして扱う場合、正しく設置しないと落下する恐れがあります。
機材を引き出した状態で上下から負荷をかけますと事故や怪我の原因となります。
D-RACK1など引き出し付きの機器を収納する際、指を挟まないように注意して下さい。
万が一異音や異常、熱をおびた場合はすぐに使用を中止し電源を切り、メーカーまでご連絡下さい。

■保証に関して

本機にはシリアル番号で製造、出荷年月日が管理されておりますので、保証書は添付されておられません。
万が一、故障した場合は製造日より1年間は無償で修理いたします。

※使用方法の誤りにおける破損・故障に関しましては有償となります。また、不適切な使用や改造による故障や怪我は補償いたしかねますのでご了承下さい。

■損害に対する責任

この商品の使用、または使用不能によりお客様に生じた損害については、当社は一切その責任を負わないものとします。
また如何なる場合でも当社が負担する損害賠償額は、お客様がお支払いになった商品の代価相当額をもってその上限とします。

お問い合わせ

有限会社Digicom

〒454-0012 愛知県名古屋市中川区尾頭橋3-11-15
TEL:052-324-8385 FAX:052-324-8386
E-Mail:info@e-digicom.co.jp
http://e-digicom.co.jp/

初版:2026年9月